


TANK INSTALLATION for Sensors over 36"

A	B	C	D	E
F	G	H	I	J

Put an "X" in the boxes you will not be using for your controls, depending on which model you are using.

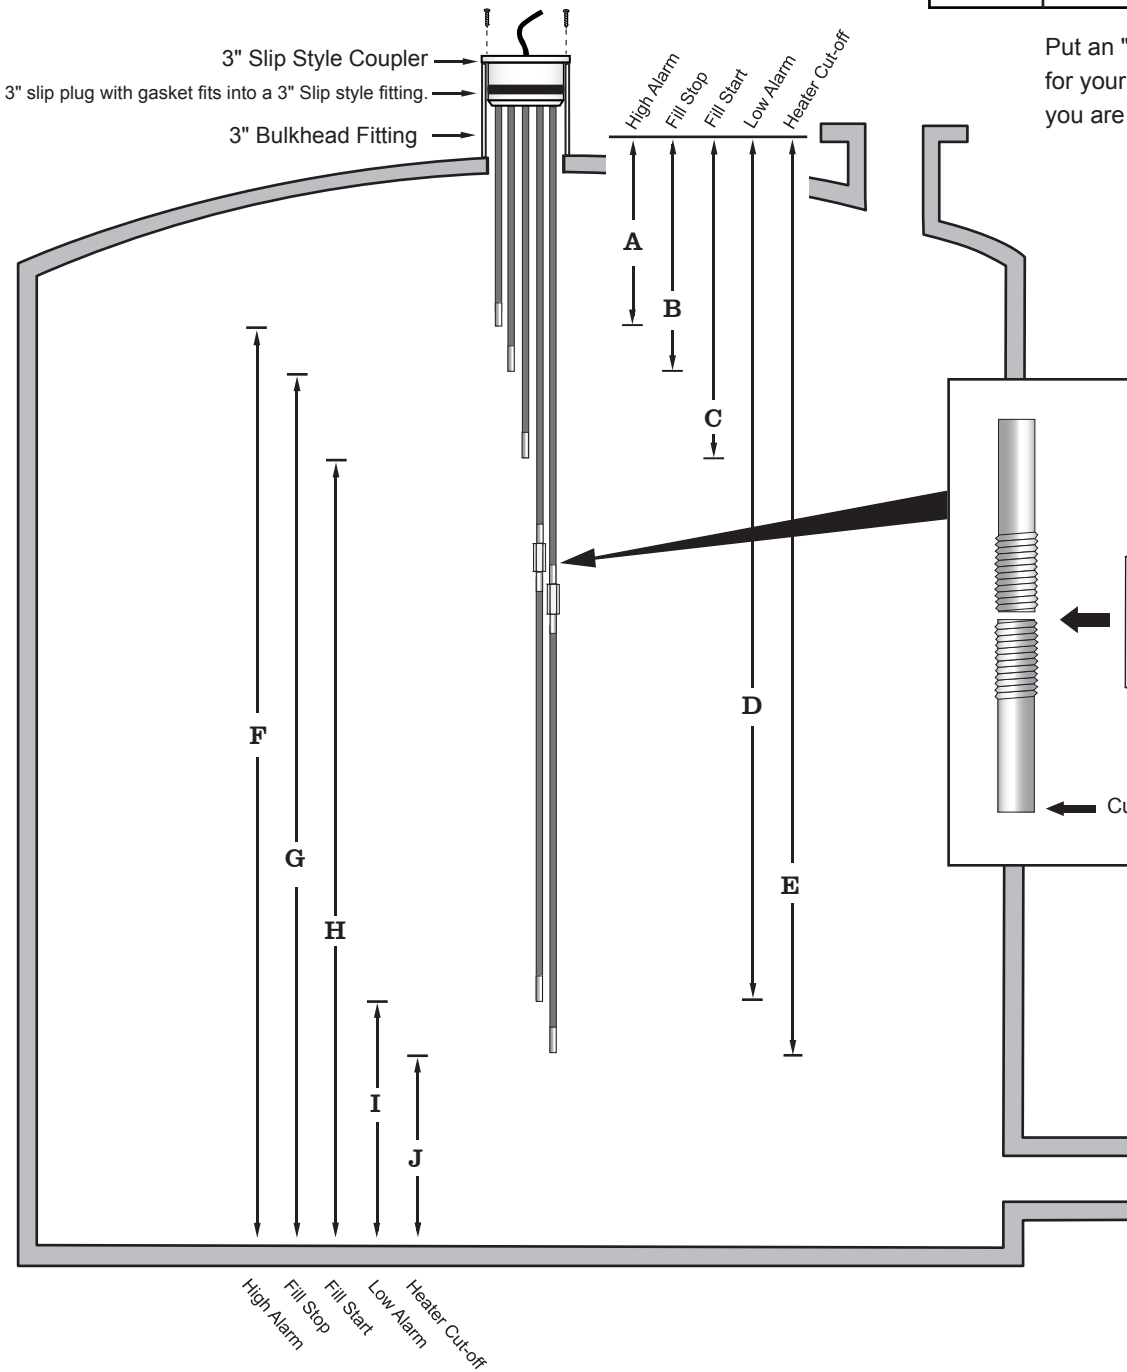

1. Cut loose probe to length.
2. Screw two lengths together.
3. Put heat shrink over the connection and shrink it with a heat gun.

Waterline Controls	
P.O. Box 12544 Scottsdale, Arizona 85260	
Toll Free: 888-905-1892 Fax: 480-629-8223	
TITLE: Tank Installation for Sensors over 36"	
WATERLINE CONTROLS	DWN BY <i>Pamela Crandall</i> APPVD BY <i>Bill Seneff</i>
SCALE: NTS	DWG NO. OVER 36"
DATE: 11-2-11	