

Installation - External Wall Mount Kit

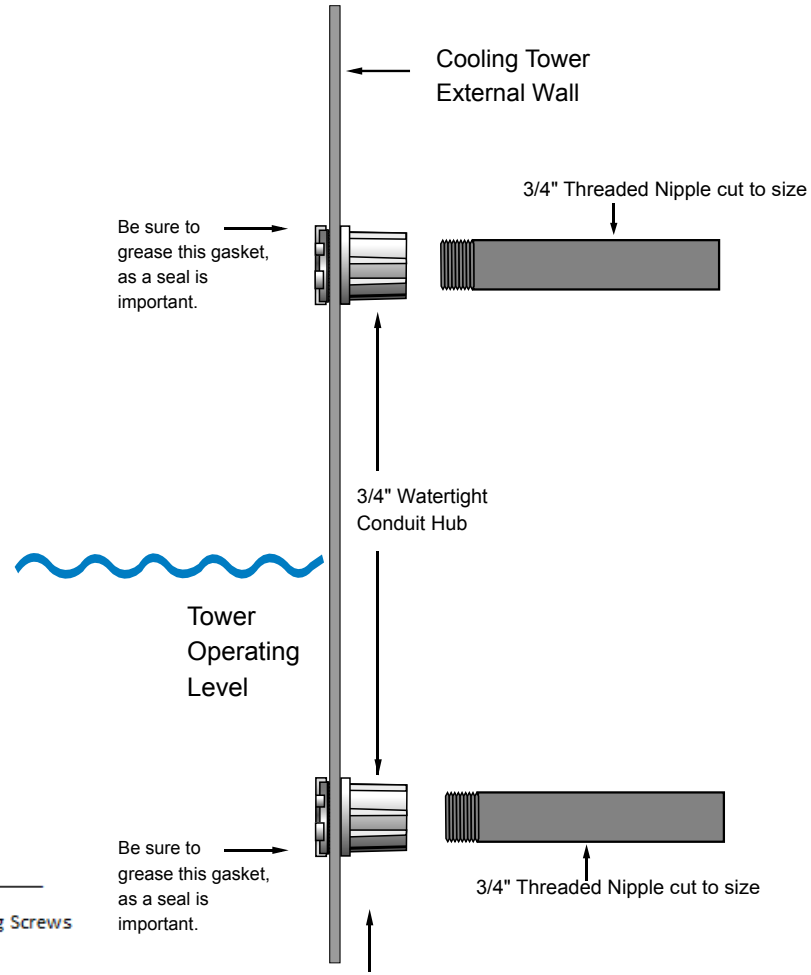

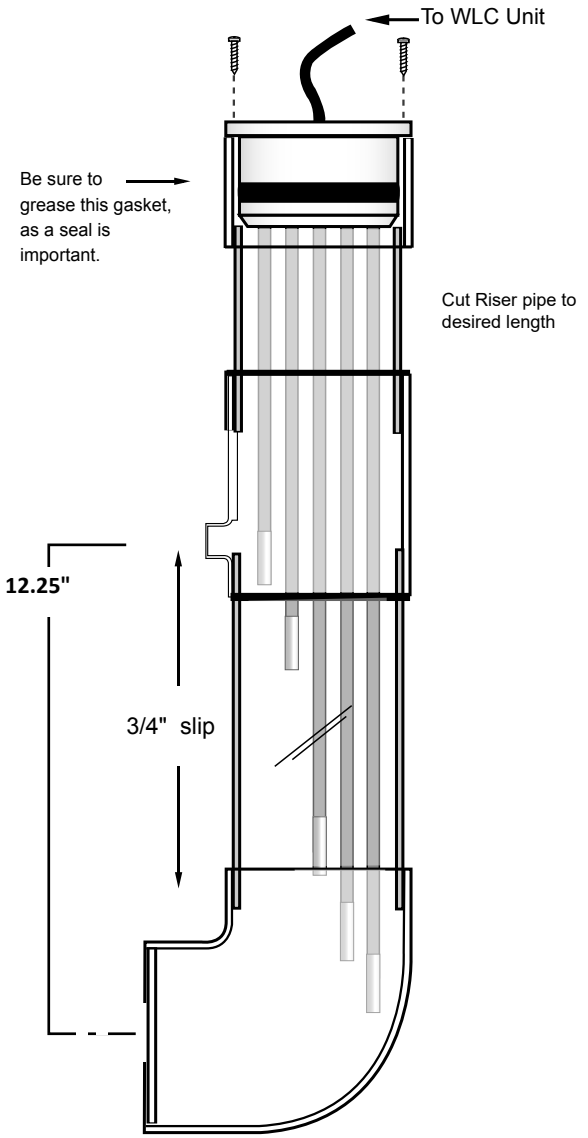

QC Checklist_____

- [ ] (2) #10 x 3/4 Self-Tapping Mounting Screws
- [ ] (1) 3" PVC Slip Coupler
- [ ] (1) 3" Riser Pipe
- [ ] (1) 3" Chamber Pipe
- [ ] (1) 3" x 3" x 3/4" PVC Tee
- [ ] (1) 3" PVC Elbow & (1) 3" x 3/4" PVC Reducer
- [ ] (1) 12" x 3/4" Sch 80 Nipple
- [ ] (2) 3/4" Conduit Hubs

1. Locate and make 2 holes (12.25") center to center in the Tower Wall.
2. Put water tight Conduit Hubs in the holes.
3. Cut 3/4" Sch 80 PVC nipples to size.
4. Thread 3/4" Sch 80 PVC nipples in the Hubs.
5. Put PVC glue on both nipples and glue into the chamber.

Waterline Controls®
P.O. Box 12544 Scottsdale, Arizona
480-905-1892

TITLE: Installation External Static Pipe	
WATERLINE CONTROLS®	DWN BY Mark Ratzel APPVD BY *Bill Seneff*
SCALE: NTS	DWG NO. **EXSTD-01**
DATE: 10-01-2023	