WLC-8000-120VAC SUBMITTAL

Simplex Pump Down

NEW MORE RELIABLE TECHNOLOGY by Waterline Controls®

FOR SPECIFYING ENGINEERS WITH A TESTED and PROVEN TRACK RECORD in MRO APPLICATIONS for 10+ years.

Our controls can REPLACE ALL SENSOR and CONTROL TYPES in ALL water based applications.

We are NOT similar to float switches, capacitive, conductive, ultrasonic, or pressure transducers. Instead, we use a microprocessor controlled frequency state change detection method. Each probe has a frequency separate from all other probes in the array and will independently change state when touched by water. The state change of the frequency on each probe is monitored by a microprocessor which can perform multiple water level control functions. Using this method makes our sensors beyond Intrinsically safe!

Our advanced technology means a MORE RELIABLE, easy to operate, & longer lasting product!



WLC-8000-120VAC kit includes:
- NEMA 4X Controller
- 1 Power Relay
- 3030 Sensor with 50ft cable
- 18" PVC Stilling Chamber
- Stainless steel bracket and U-bolts and nuts

Features:
- 5 Year Limited Warranty with Life of product Technical Support
- Intrinsically safe – no high voltage in water
- NEMA 4X control enclosure with Intuitive LED indicators
- Dry contact connections for BMS or BAS
- Microprocessor Controlled Frequency State change detection
- Color coded sensor rods & wires for intuitive installation
- Test Push-button for output devices
- Power relays for valves, pumps, etc.
- Modular construction
- Extendable sensor probes

Benefits:
- Permanently eliminate float switches
- Less than 1% failure rate in the field
- Water quality does not matter
- Sensor will not plate, foul, or deteriorate
- Flexibility in design to meet any scenario
- Minimal maintenance
- Never needs recalibration
- Stand-alone controls
- Limited lifetime warranty
- Fully Commercialized

480-905-1892
www.waterlinecontrols.com
info@waterlinecontrols.com


Sensor and Control Panel
Pre-Installation Planning Guidelines

Sensor and Control Panel Considerations

- Use the metal of the cooling tower as a barrier from EMF interference (radar, cell, antenna or radio towers).
- Do NOT use the same power source or ground circuit of a VFD.
- Do NOT run the sensor cable parallel to VFD control wires or high voltage lines.
- If the control panel and/or sensor cannot be out of site of a VFD, then maintain at least 15 feet from VFD panels, wires.

Rules for High and Low voltage circuits

- Maintain at least 3" spacing between the sensor cable and high voltage lines.
- Do NOT run the sensor cable in the same conduit with high voltage lines.
- When crossing high voltage lines, cross them perpendicularly.
- Do NOT coil excess sensor cable.

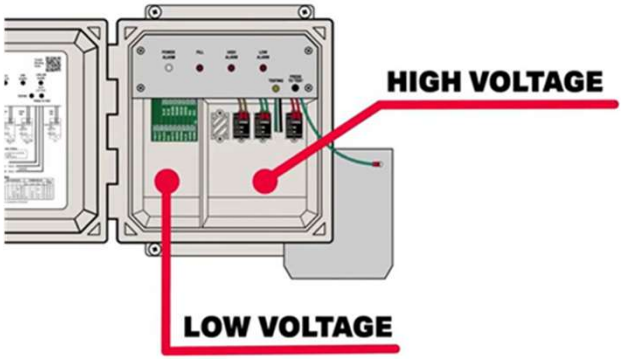


Sensor Cable Length

- The sensor cable comes in 50-foot increments, starting at 50ft. Order the cable longer than you need it. The sensor cable should be cut to fit. Be sure to leave enough slack (1 ½ times the length of the longest rod) in the sensor cable in the event the sensor needs to be removed for maintenance or inspection. If a sensor cable splice is necessary, contact Waterline Controls to order a splice box enclosure.
- Install the sensor cable in earth grounded metal conduit separate from the earth grounded metal electrical conduit housing high voltage lines. In those cases where running separate conduit is not plausible then follow the rules for high and low voltage circuits. Do NOT zip tie the sensor cable to conduit carrying high voltage lines.


Control Panel

- Provide a dedicated 15 to 20-Amp circuit to the control panel. Do NOT share the ground or neutral with other circuits and by no means should the circuit for a VFD be used.
- We recommend placing the control panel as close to the cooling tower as possible, keeping it above the water basin and out of sight of any Variable Frequency Drives (VFD).
- The control panel should be mounted in a convenient location where water spray will not impinge upon the unit and at a height above the tank overflow level to prevent water from feeding into the sensor wire conduit.
- Plan to mount the control panel where the low voltage wire crosses (perpendicularly) the least number of high voltage circuits.


Front

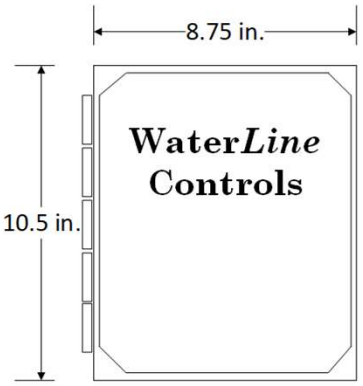

Back with Mounting Bracket

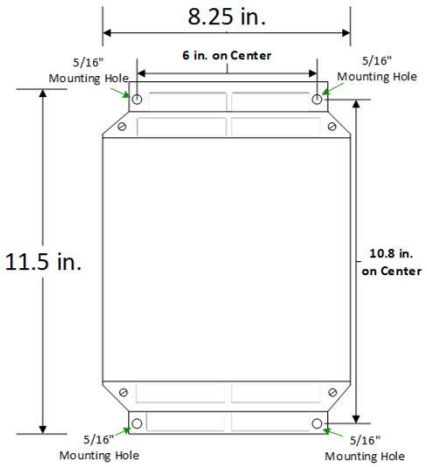

Bottom Side View

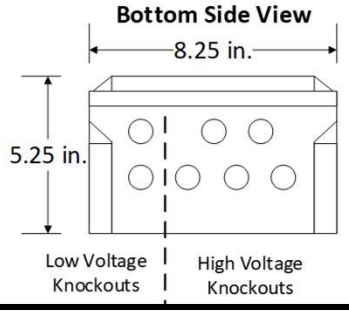


480-905-1892
www.waterlinecontrols.com
info@waterlinecontrols.com

WLC-8000-120VAC SUBMITTAL

Simplex Pump Down


OVERVIEW

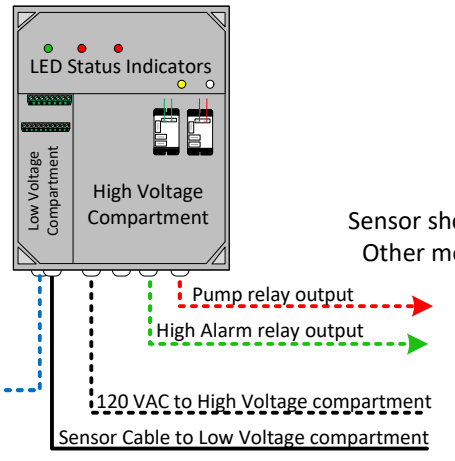

Sensor shown with Side Wall Mount.
Other mounting options available.

3030 Sensor

See Sensor Specifications page for details

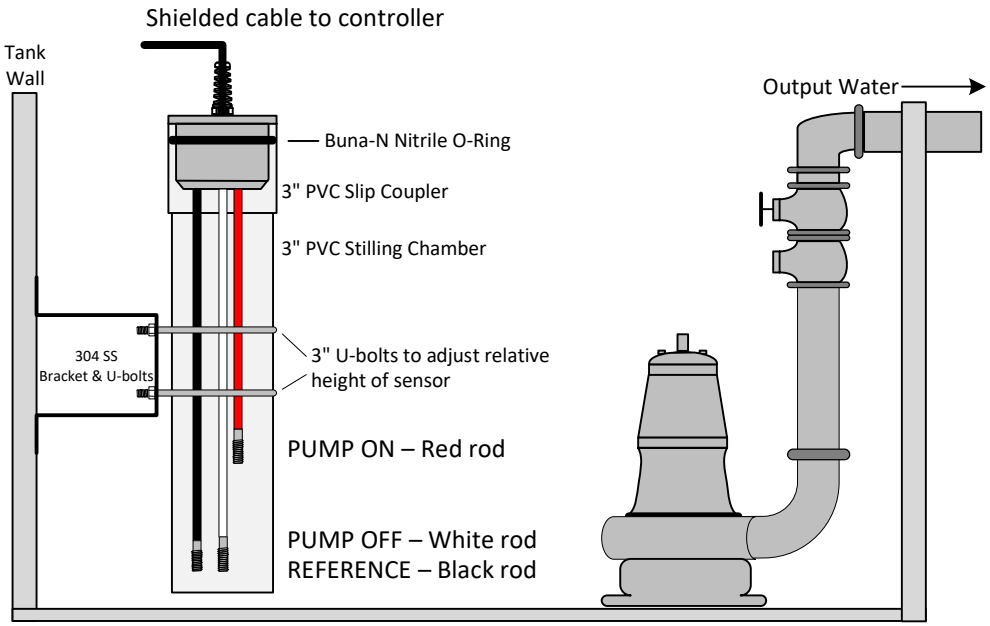

Connections to Building Automation/Management System
- Controller Dry contacts are SPST (Form A) relays rated 2 A @ 30 VDC
- 2 wire connections for each function
- 2 wire connection for fault condition

Dashed lines represent field provided cables & wiring

Options and Accessories:
- Audible Alarm with Silencer Switch
- Steady or Flashing Beacon
- Extension Rod kits
- 240 VAC Power Relays
- Power Supply for 24 VDC solenoid valves
- Solenoid Valves
- Motorized Ball Valves
- Y-Strainers

Sequence of Operation (SOO)

FUNCTION 1: PUMP ON/OFF
The RED AND WHITE rods are a differential function.

When the water level contacts the RED rod, the PUMP LED status indicator, power relay, and dry contact are **active.**

When the water level falls below the WHITE rod, the PUMP LED status indicator, power relay, and dry contact are **inactive**.

480-905-1892
www.waterlinecontrols.com
info@waterlinecontrols.com

WLC-8000-120VAC SUBMITTAL

Simplex Pump Down

Waterline Controls®
Electronic Water Level Control Systems

DESIGNED, MADE, AND TESTED IN THE USA WITH DOMESTIC AND IMPORTED PARTS


PHYSICAL WIRING CONNECTIONS

LOW VOLTAGE NORMALLY OPEN DRY CONTACT CONNECTIONS WILL CLOSE ON ALARM.
FAULT RELAY IS NORMALLY CLOSED AND WILL OPEN ON POWER LOSS.

BUILDING AUTOMATION WIRES CONNECT TO THIS TERMINAL BLOCK
EACH RELAY RATED: 2.0A @ 30 VDC MAX

CAUTION:
EXCEEDING RELAY RATINGS COULD MAKE THE DRY CONTACTS FAIL AND VOID THE WARRANTY


BAS TERMINAL CONNECTIONS
RED PAIR = PUMP
GREEN PAIR = NOT USED
BROWN PAIR = NOT USED
BLUE PAIR = NOT USED

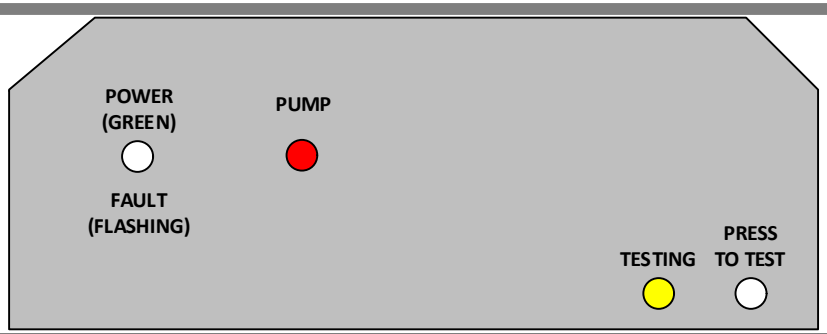

CONTROL UNIT RATING

VOLTS: 120VAC (50/60 Hz)
AMPS: 0.5A
WATTS: 60W

240VAC MODEL ALSO AVAILABLE

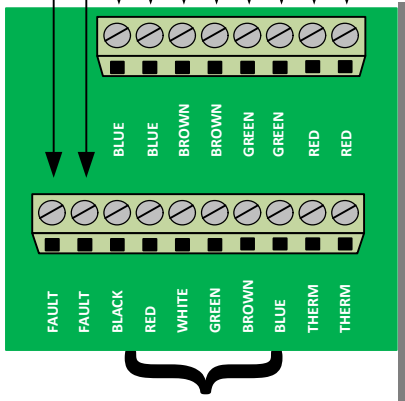


Sensor Wires Connect Here




LOW VOLTAGE RACEWAY FOR SENSOR AND BAS/BMS WIRES


EXAMPLE OF CONNECTING A 120VAC PUMP

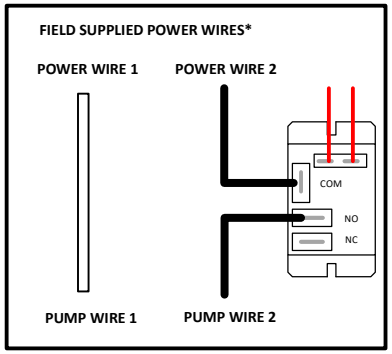

Colored wire pairs are relay connections to PCB

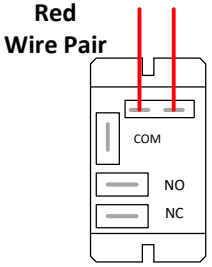

Pump Power Relay



FIELD SUPPLIED 120VAC CONNECT HERE

Pumps are field connected to the Pump Power Relay.

If using a 3 phase pump, then the Pump Power Relay can be used as a pilot relay to the pump contactor coil.

HIGH VOLTAGE POWER RELAYS

Form C – SPDT
Rated 40A @ 120VAC
Relay terminals are ¼" male spade

240VAC High Voltage Power Relays also available

NOTE: This control panel does not provide power to devices directly. Separate power is needed for controlled devices.

HIGH VOLTAGE COMPARTMENT

480-905-1892
www.waterlinecontrols.com
info@waterlinecontrols.com

WLC-8000-120VAC SUBMITTAL

Simplex Pump Down

FUNCTIONAL DIAGRAMS

LED STATUS INDICATORS

POWER PUMP

GREEN = POWER ON OFF = POWER LOSS RED/GREEN ALTERNATING = FAULT	RED = ACTIVE OFF = INACTIVE


The Power LED will be off on power loss, Green when powered on and Flashing on Fault conditions.

A fault condition occurs if water is detected on the rods out of order. Example: water detected on High Alarm but not on Low Alarm.

The Status Indicator LEDs will be Red when active and off when inactive.

LOW VOLTAGE DRY CONTACTS TO BUILDING AUTOMATION SYSTEM


POWER PUMP*

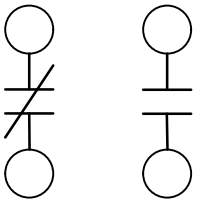

*ACTIVE = CLOSED
INACTIVE = OPEN

EACH DRY CONTACT IS A FORM (A) SPST RELAY
RATED 2A @ 30VDC

HIGH VOLTAGE POWER RELAYS

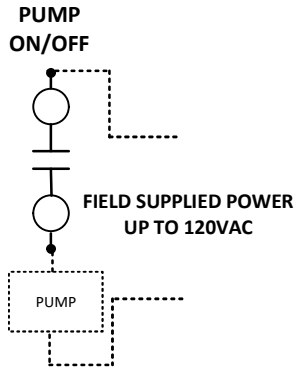

Example of connecting devices to the Normally Open connection of the power relays

PRODUCT FUNCTION TRUTH TABLE

MODEL	BMS DRY CONTACTS					POWER RELAY				
	FAULT/POWER LOSS	PUMP			BAS WIRES	PUMP				SELF TEST
WLC-8000	X	X			4	X				X

480-905-1892
www.waterlinecontrols.com
info@waterlinecontrols.com

WLC-8000-120VAC SUBMITTAL

Simplex Pump Down

SENSOR SPECIFICATIONS

- 6 Conductor 18AWG Solid Core Copper wire with Overall Aluminum Foil and Drain wire providing 100% coverage against low frequency RFI.
- 0.33" diameter cable with 0.045" Black PE Jacket.
- Standard Sensor Cable length is 50 ft. with a maximum Sensor Cable length of 200 ft.
- Cable lengths over 200 ft. and up to 900 ft. require a separately purchased slice kit.
- Please call for any cable lengths over 900 ft.

Probe/Rod			
Color	**Function**	**Standard Length**	
Red	**Pump On**	**A**	**15-1/2"**
White	**Pump Off**	**B**	**17"**
Black	**Reference**	**B**	**17"**

NOTE: Custom lengths are available with a submitted Sensor Approval form



EXT3 Extension Rod Kit contains:
(3) 45.5" Color coded 304L rods
(3) Heat shrinks
(3) Coupler Nuts
(6) Jam Nuts


Optional Extension rod kits are available to extend each rod by 45.5".

Extension rods threaded at each end to allow for any depths and are cut in the field during sensor installation.

PART # SENSOR-EXT3-45.5in

NOTE: Sensor rods cannot be removed from sensor

3030 Sensor
3" UV-Inhibited ABS Slip Plug sensor head is rated -4°F to 176°F

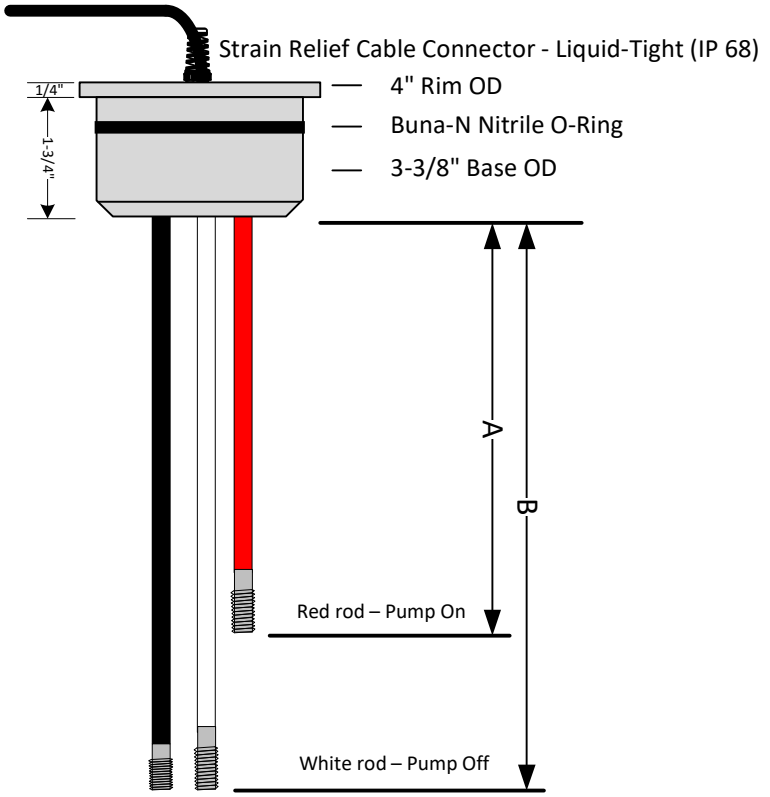

- All rods are 304 stainless steel with 1/4-20 threaded ends.
- Irradiated Polyolefin Heat Shrink Tubing
- Sensor rods can be extended using an Extension Rod kit accessory.
- Sensor rods and wires are Intrinsically safe with circuit limited signals.

480-905-1892
www.waterlinecontrols.com
info@waterlinecontrols.com

Electronic Water Level Management Systems

5 Year Limited Warranty - Water*Line* Controls®

The 5 Year Limited Warranty is extended to the original consumer purchaser of this Water*Line* Controls® product manufactured by Water*Line* Controls®, Scottsdale, Arizona. Water*Line* Controls® warrants the unit, including the parts and components thereof, to be free of defects in material and workmanship under normal use and service conditions. This warranty does not cover plumbing or normal replacement items and parts, including gaskets and O-rings. Water*Line* Controls® does not cover improper installation of the unit or its parts. If you have any questions regarding the installation of your WaterLine Controls® unit, please feel free to contact us. **Be sure to include the serial number of your unit.**

The 5 Year Limited Warranty commences on the date of installation. Parts discovered to have manufacturing defects within 1 Year of installation shall be replaced at no charge to the original consumer. Defects discovered after one year and up to the fifth year following the installation, shall be replaced at a fee of $275.00 per item. Water*Line* Controls® will repair or replace, at its option, a unit or part proved to be defective within the warranty period and under the conditions of this 5 Year Limited Warranty.

This 5 Year Limited Warranty does not apply if the failure is caused or contributed by any of the following: power surges, acts of God, power failure or reduction of power supplied to the unit, unusual atmospheric conditions, improper handling, improper storage, winter freezing, abuse, improper installation, unsuitable application, lack of reasonable and necessary maintenance, natural disasters, or repairs/alterations made or attempted by other than Water*Line* Controls® or an Authorized Technician approved by Water*Line* Controls®.

The consumer must deliver or ship the unit or warranty parts freight prepaid to Water*Line* Controls®. Authorization to return an item to Water*Line* Controls® must be obtained from Water*Line* Controls® Customer Service Department at 480-905-1892. For further assistance with this process please contact the Customer Service Department. Be sure you insure your shipment against loss or damage in transit.

Water*Line* Controls® is not responsible for the cost of removal of the unit or parts of the unit, damages due to removal, or any other expenses incurred, including in shipping the unit or parts to or from Water*Line* Controls® or its closest Authorized Service Center or the installation of the repaired or replaced unit. The consumer must bear these expenses.

THIS 5 YEAR LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ALL SUCH OTHER WARRANTIES ARE DISCLAIMED EXCEPT TO THE EXTENT ANY IMPLIED WARRANTY MAY BE IMPOSED BY STATE CONSUMER LAW. ANY SUCH IMPLIED WARRANTY IMPOSED BY STATE CONSUMER LAW IS LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF INSTALLATION. IN NO EVENT SHALL WATER*LINE* CONTROLS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR ANY NATURE OR KIND OR FOR DAMAGES TO PERSONS OR PROPERTY, INCLUDING ANY DAMAGE RESULTING FROM THE USE OF THE UNIT WITH A SUBSTANDARD WATER CIRCULATION OR SUPPLY SYSTEM.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

This limited warranty is valid only in the United States of America and Canada.

Water*Line* Controls® • PO Box 12544 Scottsdale, Arizona 85267 • Phone: 480-905-1892 • Email: info@waterlinecontrols.com
© SDI 2026